

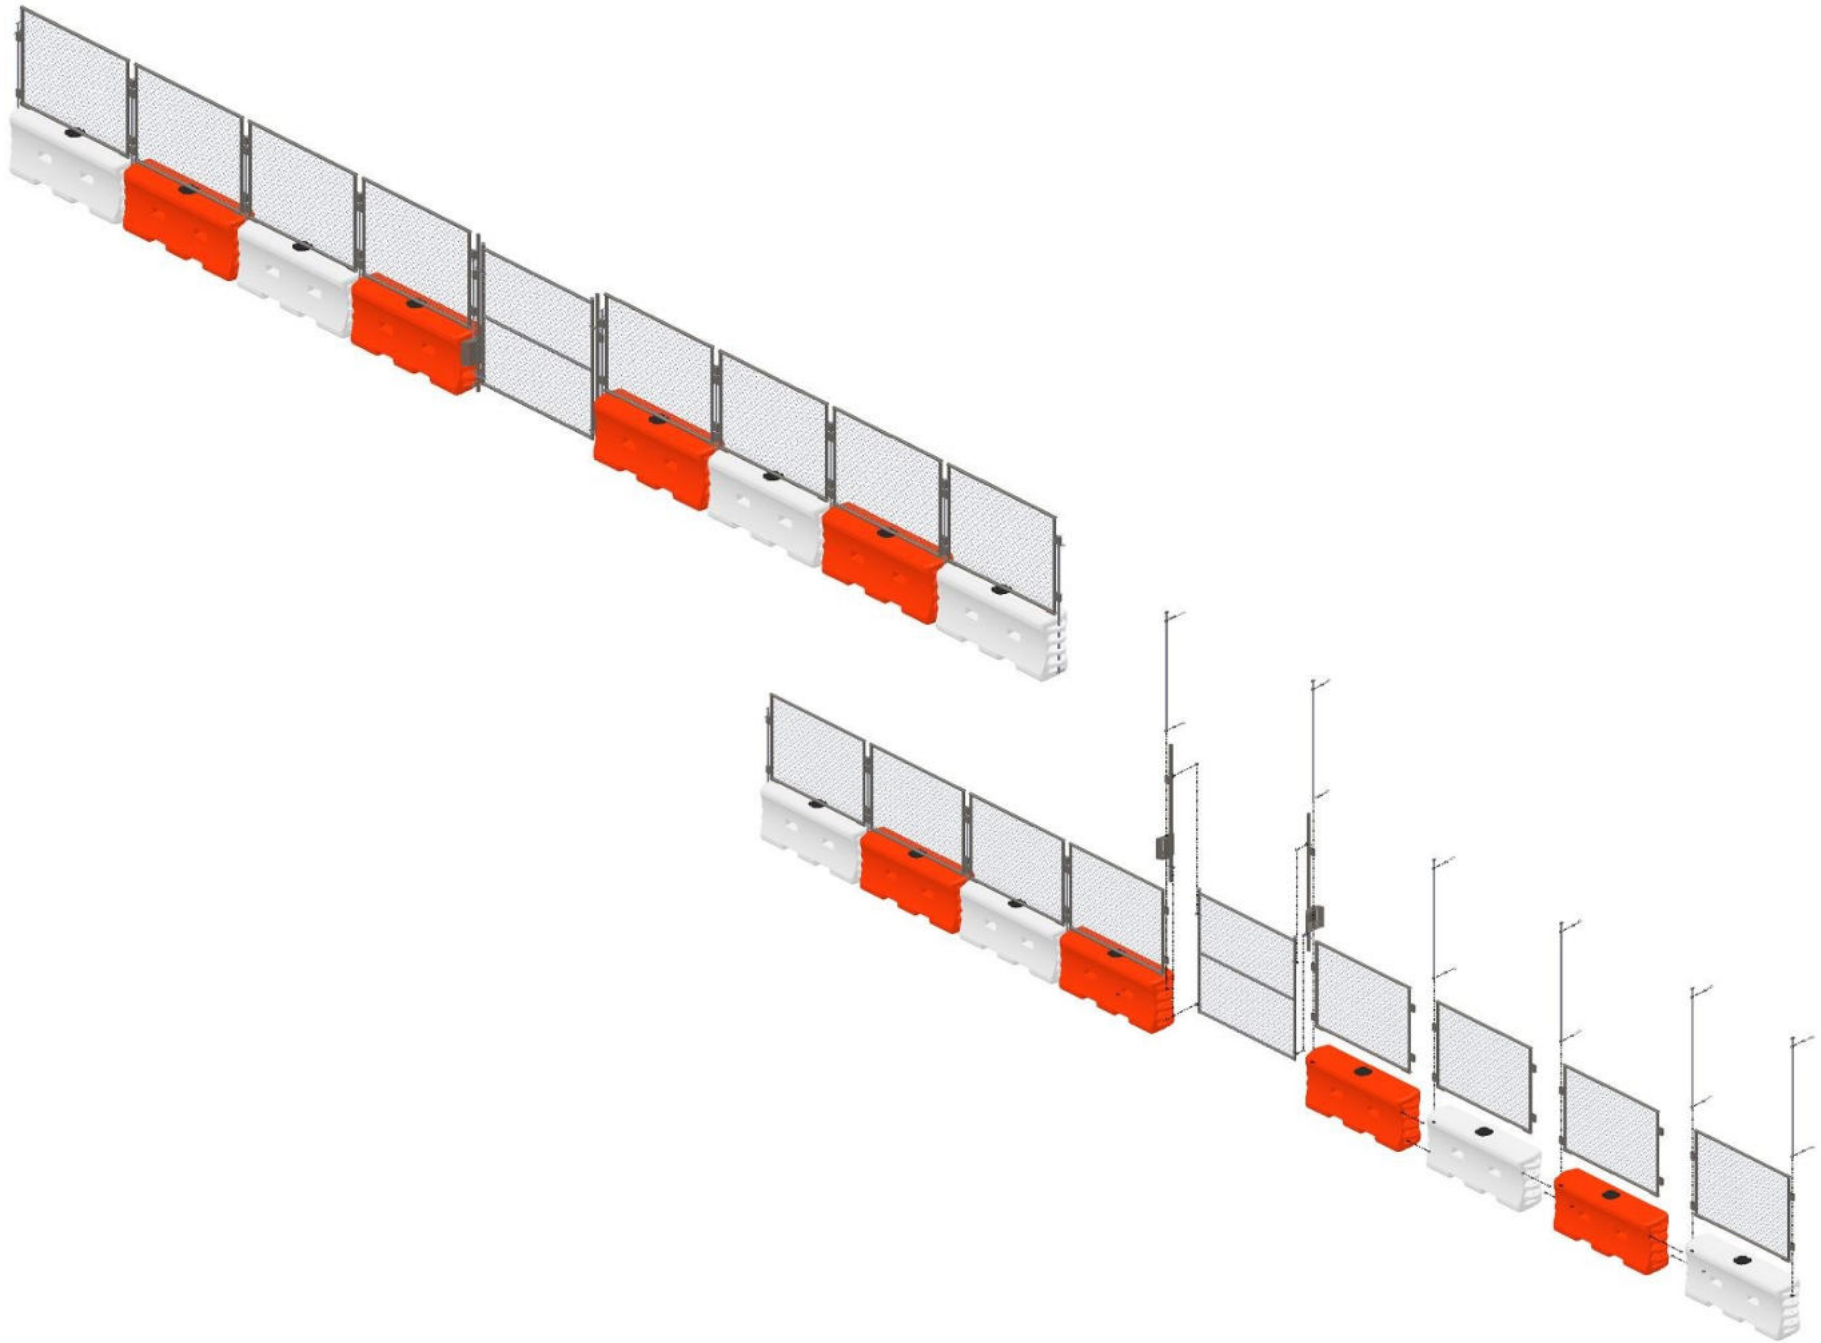
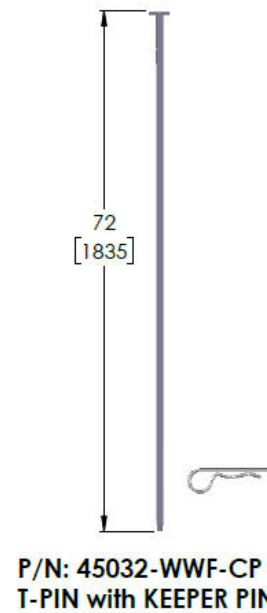
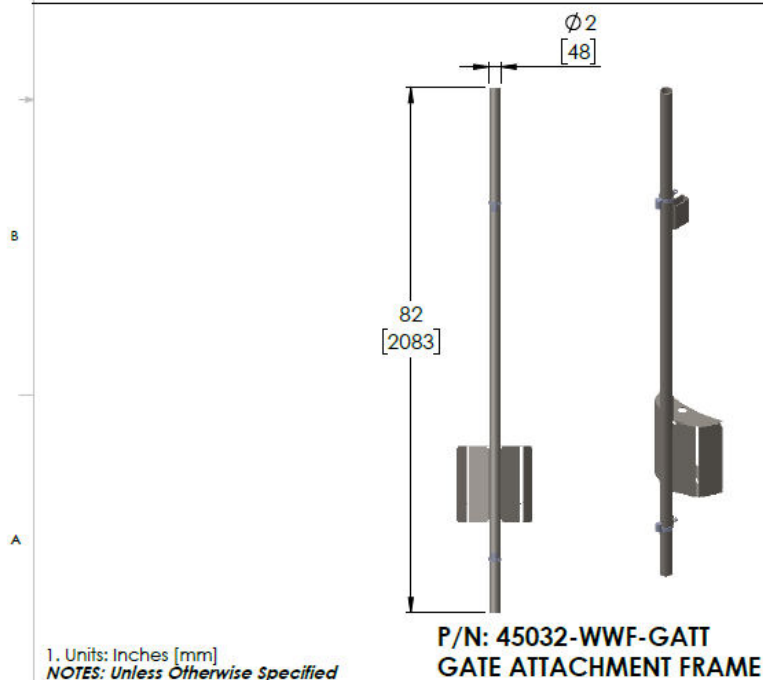


TRAFFIX WATER-WALL FENCE AND GATE INSTALLTION GUIDE

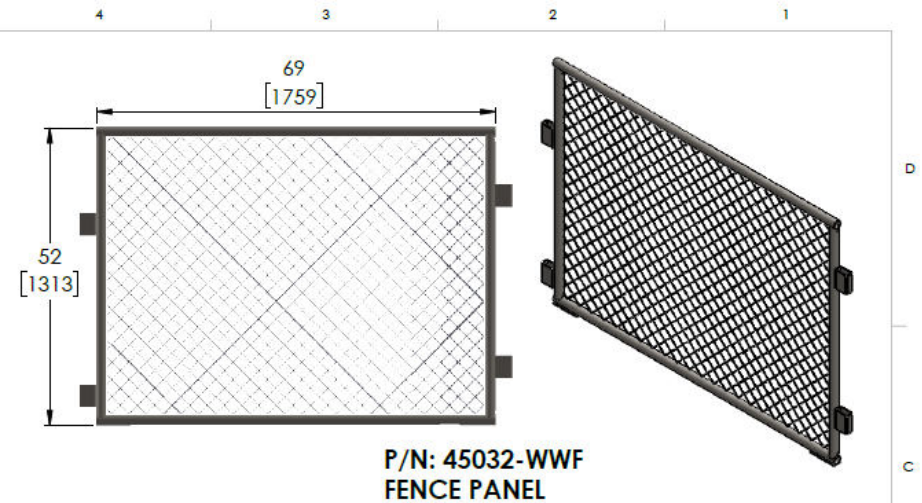

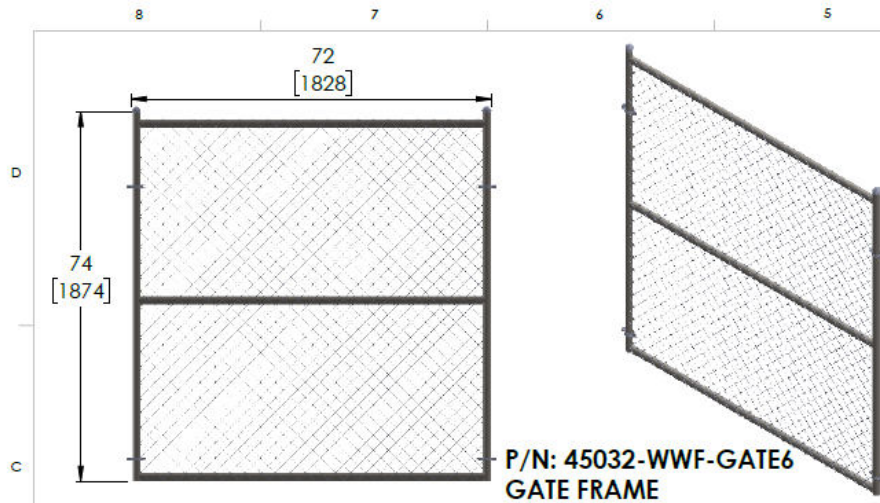

UNLESS OTHERWISE SPECIFIED:
ALL DIMENSIONS ARE IN INCHES [mm].
TOLERANCES:
FRACTION: XX ± 1/16"
DECIMAL: XX ± .0625"
X.XX ± .002"
X.XXX ± .015"
DEGREES: ± 0.5°

**TrafFix
Devices Inc.**

160 Avenida La Pata
San Clemente, CA 92673
(949) 361-5063
FAX (949) 361-9205
www.traffixdevices.com

TITLE:
TrafFix Water-Wall Fence

DRAWN BY:
AF
CHECKED BY:
FA
APPROVED BY:
FA

DATE:
10/17/18
DATE:
-
DATE:
-

SIZE
B

DWG. NO.
300-313

REV
A

SHEET 1 OF 1

1. Units: Inches [mm]
NOTES: Unless Otherwise Specified

P/N: 45032-WWF-GATT


Step 1: Join the 2 Water-Walls at the knuckles

Step 2: Insert P/N 45032-WWGA, Gate Attachment Frame at the top knuckle




Step 3: Position P/N 45032-WWF, Fence Panel on the Water-Wall, making sure that the flat plate on the fence frame is positioned on top of the Water-Wall.

P/N: 45032-WWF


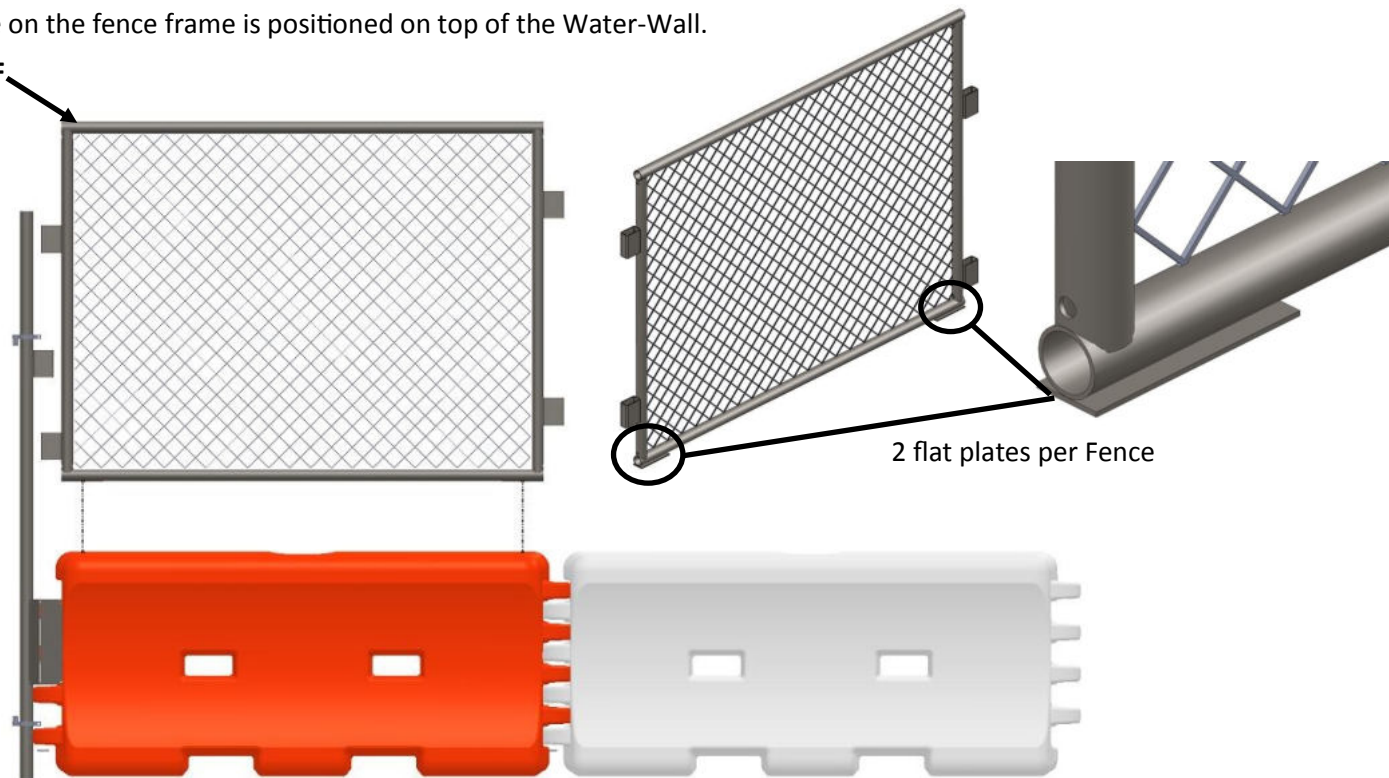


P/N: 45032-WWF-CP


Step 4: Assemble by inserting P/N 45032-WWF-CP, T-Pin with Keeper Pin through the both the rectangular slots on the Fence Panel and the Gate Attachment Frame. It should also go through the holes on the Gate Attachment Frame and the knuckles on the Water Wall.

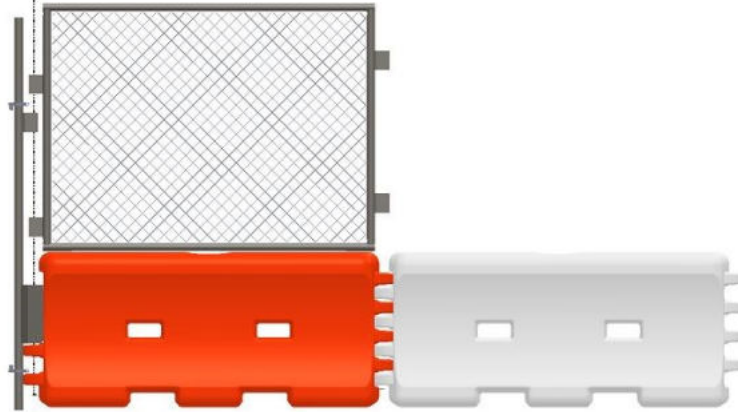

Step 5: Position the 2nd Fence Panel on the Water-Wall, making sure that the flat plate on the fence frame is positioned on top of the Water-Wall. Assemble by aligning the rectangular slots on both the fence frames and inserting the T-pin through the slots which also goes through the holes on the knuckles of the Water-Wall.

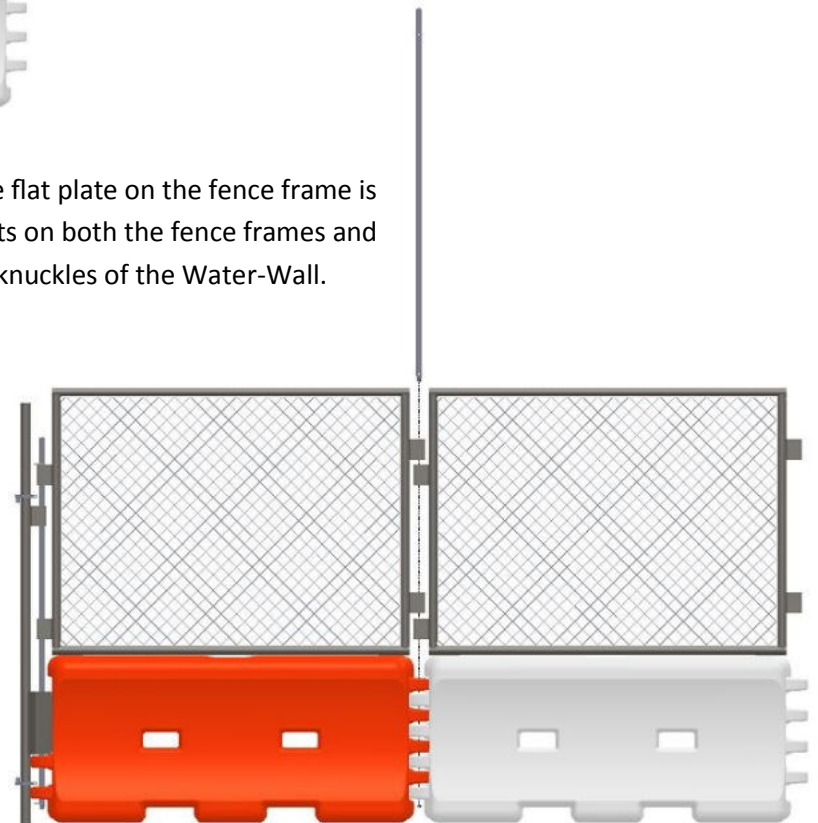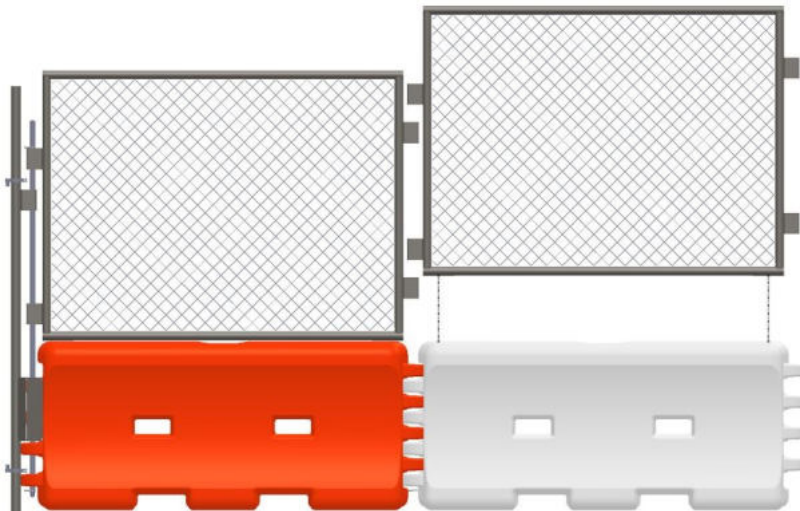

P/N: 45032-WWF-GATE6

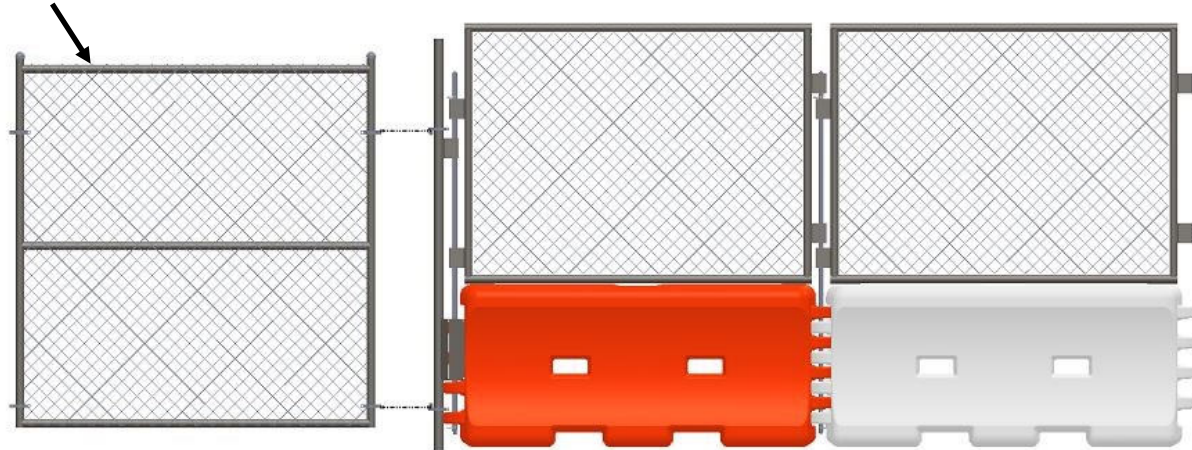

Step 5: Position P/N 45032-WWF-GATE6, Gate in front of the Attachment Frame and assemble it by aligning the female clip on the Gate to the male hinge clip on the Attachment Frame.

